



Homflor Herringbone

Инструкция по укладке

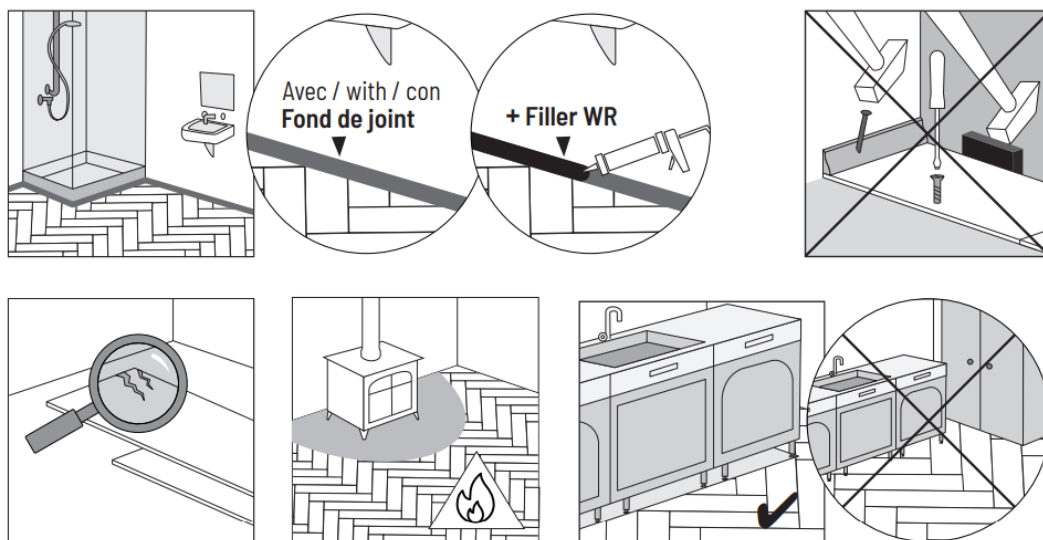











Préparation

EN Before laying **ES** Antes de colocar **DE** Vor dem verlegen **RU** Подготовка **TR** Hazırlık
IT Prima della posa **PT** Preparação **GR** τοποθέτηση **PL** Przygotowanie **CH** 准备工作

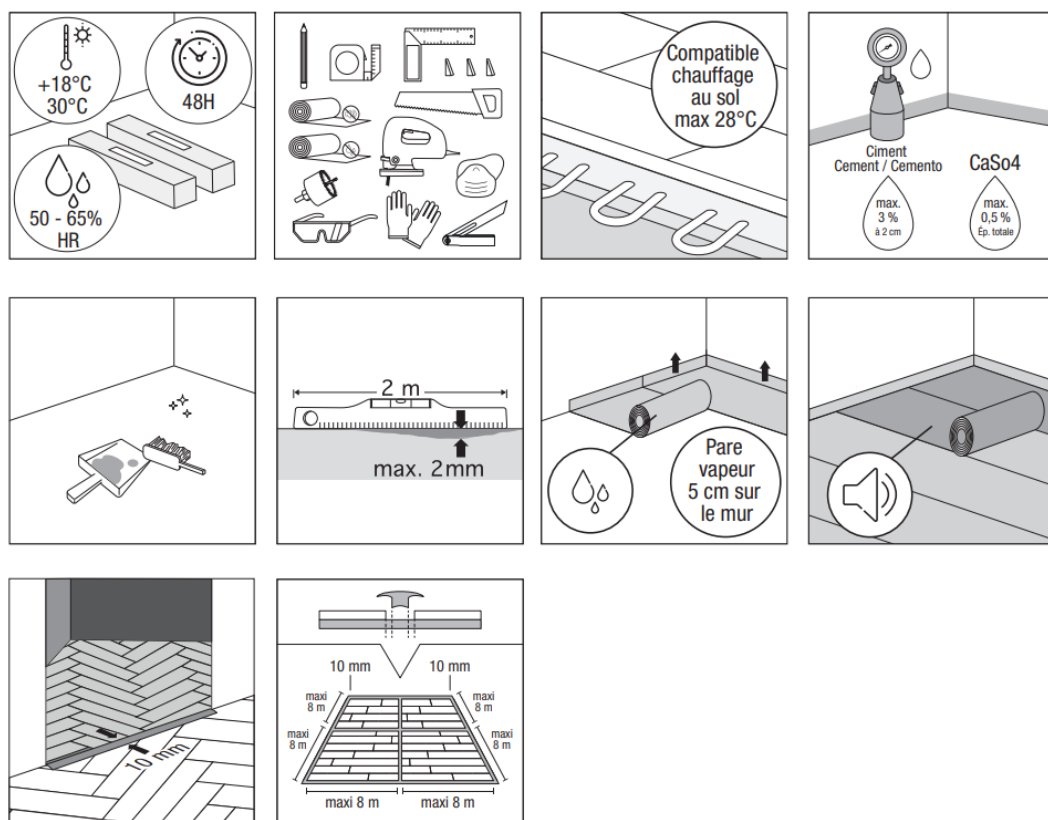

Instructions de pose

EN Laying instructions **ES** Instrucciones de instalación
DE Verlegeanleitung **RU** Инструкция по укладке **TR** Montaj
 Talimatları **IT** Istruzioni di posa **PT** Instruções de aplicação
GR Ενδοδαπέδια θερμοανση **PL** Instrukcja montażu
CH 安装说明

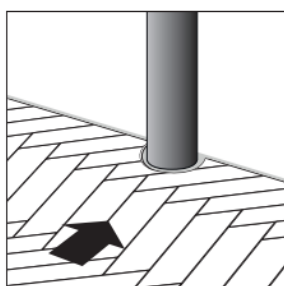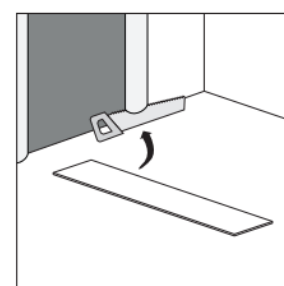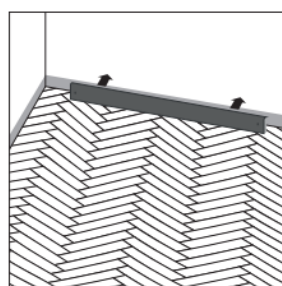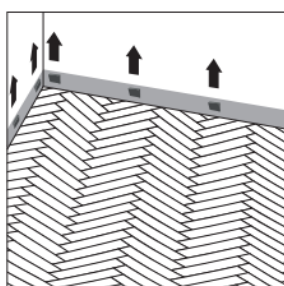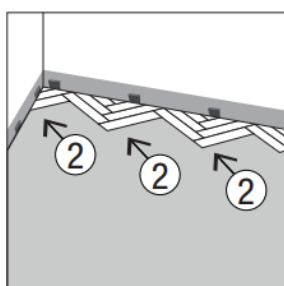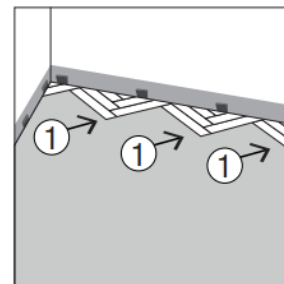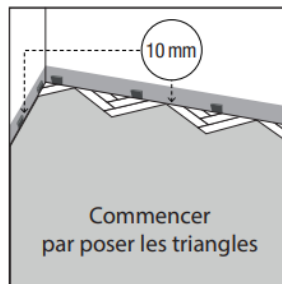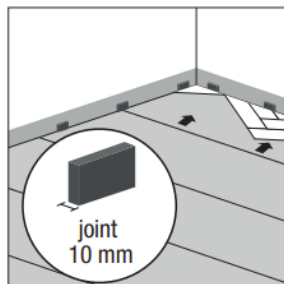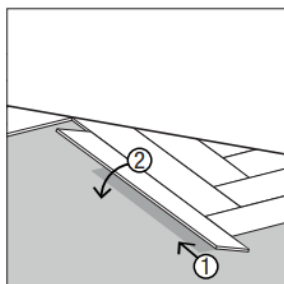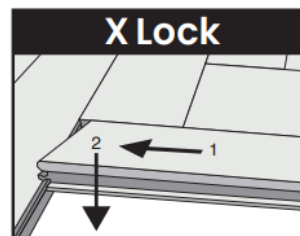

Entretien

EN Flooring maintenance **ES** Mantenimiento

DE Pflege **RU** Уход за ламинатом **TR** Kullanma talimatı

IT Pulizia **PT** Limpeza **GR** Συντήρηση **PL** Konserwacja

CH 保养

